


BEDDING \$AVER MAT

INSTALLATION GUIDE

STEP #1: Prepare the underlayment grade

Using a 2" x 4" board (as shown in A), screed level your base grade material. Compact if necessary (B).

A

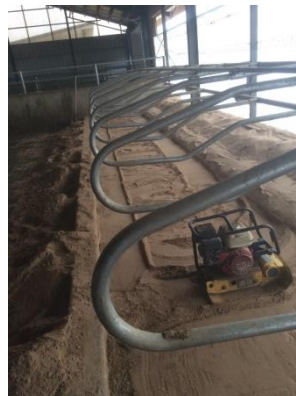

STEP #2: Install the BS-S Mat (C) and lock together (D). Approximate depth from top of curb to top of BS-S Mat is 2" (E).



STEP #3: Install your bedding material over the top of the BS-S Mat (F & G) and let your cows enjoy.



Cell: 616-292-3755



4650 – 20 Mile Road
Kent City, MI 49330
www.foxworthysupply.com
Email: info@foxworthysupply.com

Made In The USA -- From Reclaimed Rubber